



Easier Pumping

One check and a little care can make pumping your M13 decon so much easier.

Before you go to the field, check the O-ring in the pump's hose connector. If the O-ring is missing or damaged, you won't be able to build up pressure in the decon. You'll pump and pump without much result. So alert your NBC NCO to a missing or damaged O-ring. To get a new free O-ring, contact Tuan Pham at (309) 782-6949, DSN 793-6949, phamt@ria.army.mil.

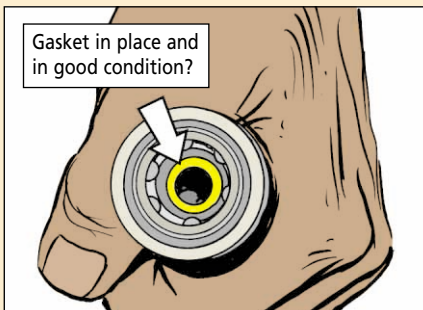

When you connect the pump to the container, pay attention to the scribe line on each connector. If you don't line up the lines, the hose isn't properly locked on. That makes for more hard pumping.

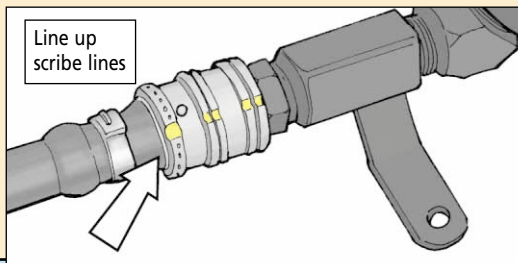

Remember to stay at least 3 feet away from what-ever you're spraying with the DS2. Otherwise, you'll get soaked.

IF YOU'D READ YOUR PS, YOU'D HAVE STOOD AT LEAST 3 FEET BACK!

